


Garmin GNS530 Key/Knob Quick Reference Guide

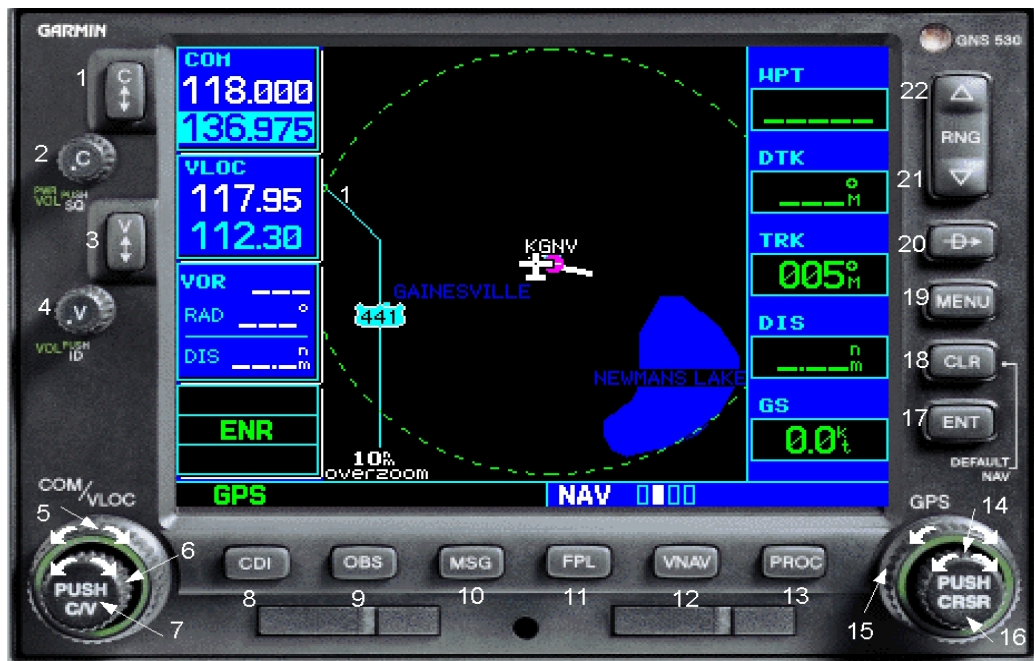

Number	Name	Function
1	COM flip-flop key	Press to swap primary/standby COM frequencies. Press and hold for emergency communication frequency.
2	COM power/volume knob	Twist to adjust COM volume. Press to power on/off.
3	VLOC flip-flop key	Press to swap primary/standby VLOC frequencies.
4	VLOC volume knob	Twist to adjust VLOC volume. Press to identify VLOC station.
5	Large left knob	Twist to change COM/VLOC frequencies to left of decimal place.
6	Small left knob	Twist to change COM/VLOC frequencies to right of decimal place.
7	Push C/V	Press to toggle white tuning cursor between COM and VLOC windows.
8	CDI key	Press to switch between GPS and VLOC navigation modes.
9	OBS key	Press to select manual/automatic sequencing of waypoints. You can display a course to/from active waypoint using OBS on installed navigation instrument.
10	Message key	Press to view unit alerts and message.
11	Flight plan key	Press to create, save, open, and edit flight plans for GPS guidance.
12	Vertical navigation key	Press to create a target point and altitude for descent planning.
13	Procedures key	Press to activate/load instrument approaches, arrivals, and departures.
14	Small right knob	Twist to move between pages within a page group. With cursor activated, twist to move cursor up and down.
15	Large right knob	Twist to move between page groups. With cursor activated, twist to move cursor left and right.
16	Push CRSR	Press to toggle on screen cursor.
17	Enter key	Press to confirm information or enter a selection.
18	Clear key	Press to erase information or cancel an operation. Press and hold to return to default nav page from anywhere within unit's pages.
19	Menu key	Press to access page-specific menu.
20	Direct-to key	Press to engage in direct-to navigation.
21	Range down key	Press to zoom into map pages.
22	Range up key	Press to zoom out of map pages.